

FULGOR

MILANO

WINE CELLAR - 45cm

MODEL WC45-10

INSTRUCTION MANUAL

COMPRESSOR WINE COOLER

This manual contains important information including **safety and installation instructions** of the appliances. Please read it carefully before use and follow all safety information & instructions. It is recommended to keep this manual for easy reference so that you can be familiar with the operation of the appliance.


IMPORTANT SAFETY INFORMATION	pag. 5
STURCTURE AND DESCRIPTION	pag. 6
BUILT-IN-COLUMN SERIES (Built into a kitchen cabinet).....	pag. 6
ACCESSORY INSTALLATION BEFORE OPERATING	pag. 8
UNPACKING AND CLEANING THE WINE COOLER.....	pag. 8
OPERATING THE WINE COOLER.....	pag. 8
WORKING CLIMATE.....	pag. 8
WINE STORAGE.....	pag. 8
CONTROL PANEL.....	pag. 10
POWER ON/OFF CONTROL.....	pag. 10
UNLOCKING THE CONTROL PANEL.....	pag. 11
INTERIOR LIGHTING ON/OFF CONTROL.....	pag. 11
TEMPERATURE DISPLAY WINDOW.....	pag. 11
TEMPERATURE SETTING.....	pag. 12
SELECTING FAHRENHEIT(°F) & CELSIUS (°C) DISPLAY.....	pag. 12
CARE AND MAINTENANCE	pag. 12
CLEANING THE WINE COOLER.....	pag. 12
POWER FAILURE.....	pag. 13
MOVING THE WINE COOLER.....	pag. 13
ENERGY SAVING TIPS.....	pag. 13
TROUBLESHOOTING	pag. 14

IMPORTANT SAFETY INFORMATION

Before use the appliance, please properly position and install it as described in this manual. To avoid the risk of fire, electrical shock, or injury when using the appliance, follow these basic precautions:

- The appliance is intended to be used exclusively for the storage of wine.
- Make sure the voltage/current marked on the rating label corresponds with your supply voltage. Plug into a grounded 3-pin outlet, do not remove grounding pin, do not use an adapter, and do not use an extension cord.
- It is recommended that a separate circuit, serving only your appliance be provided.
- Never clean the appliance parts with flammable fluids which may create a fire hazard or explosion. And do not store or use gasoline or other flammable vapors and liquids in the vicinity of the appliance.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the appliance or disconnect power before cleaning, maintenance or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of the appliance unless it is specifically recommended in this material. All other servicing should be referred to a qualified technician.
- Ensure enough peoples to move and install the appliance to avoid any damage to the appliance or injury to the peoples.
- To ensure proper ventilation for the appliance, the front of the unit must be completely unobstructed. Locate the unit away from direct sunlight and sources of heat (stove, heater, radiator, etc.).
- The fuse (or circuit breaker) size should be 10 amps or higher.
- It is important for the appliance to be leveled in order to work properly. You may adjust the appliance's feet to level it.
- This appliance is not intended for use by young children. Never allow children to operate, play with or crawl inside the appliance.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this appliance for other than its intended purpose.
- The use of attachments not recommended by the manufacturer may be hazardous.
- When you dispose the appliance, take off the door and leave the shelves in place so that children may not easily climb inside. And make sure the coolant circuit, particularly the heat exchanger at the back/bottom of the unit not be damaged.



The  symbol on the product or its packaging indicates that this product is not to be handled as normal household waste and it is to be taken to a recycling collection point for electrical and electronic goods.

STRUCTURE AND DESCRIPTION

BUILT-IN-COLUMN SERIES (Built into a kitchen cabinet)




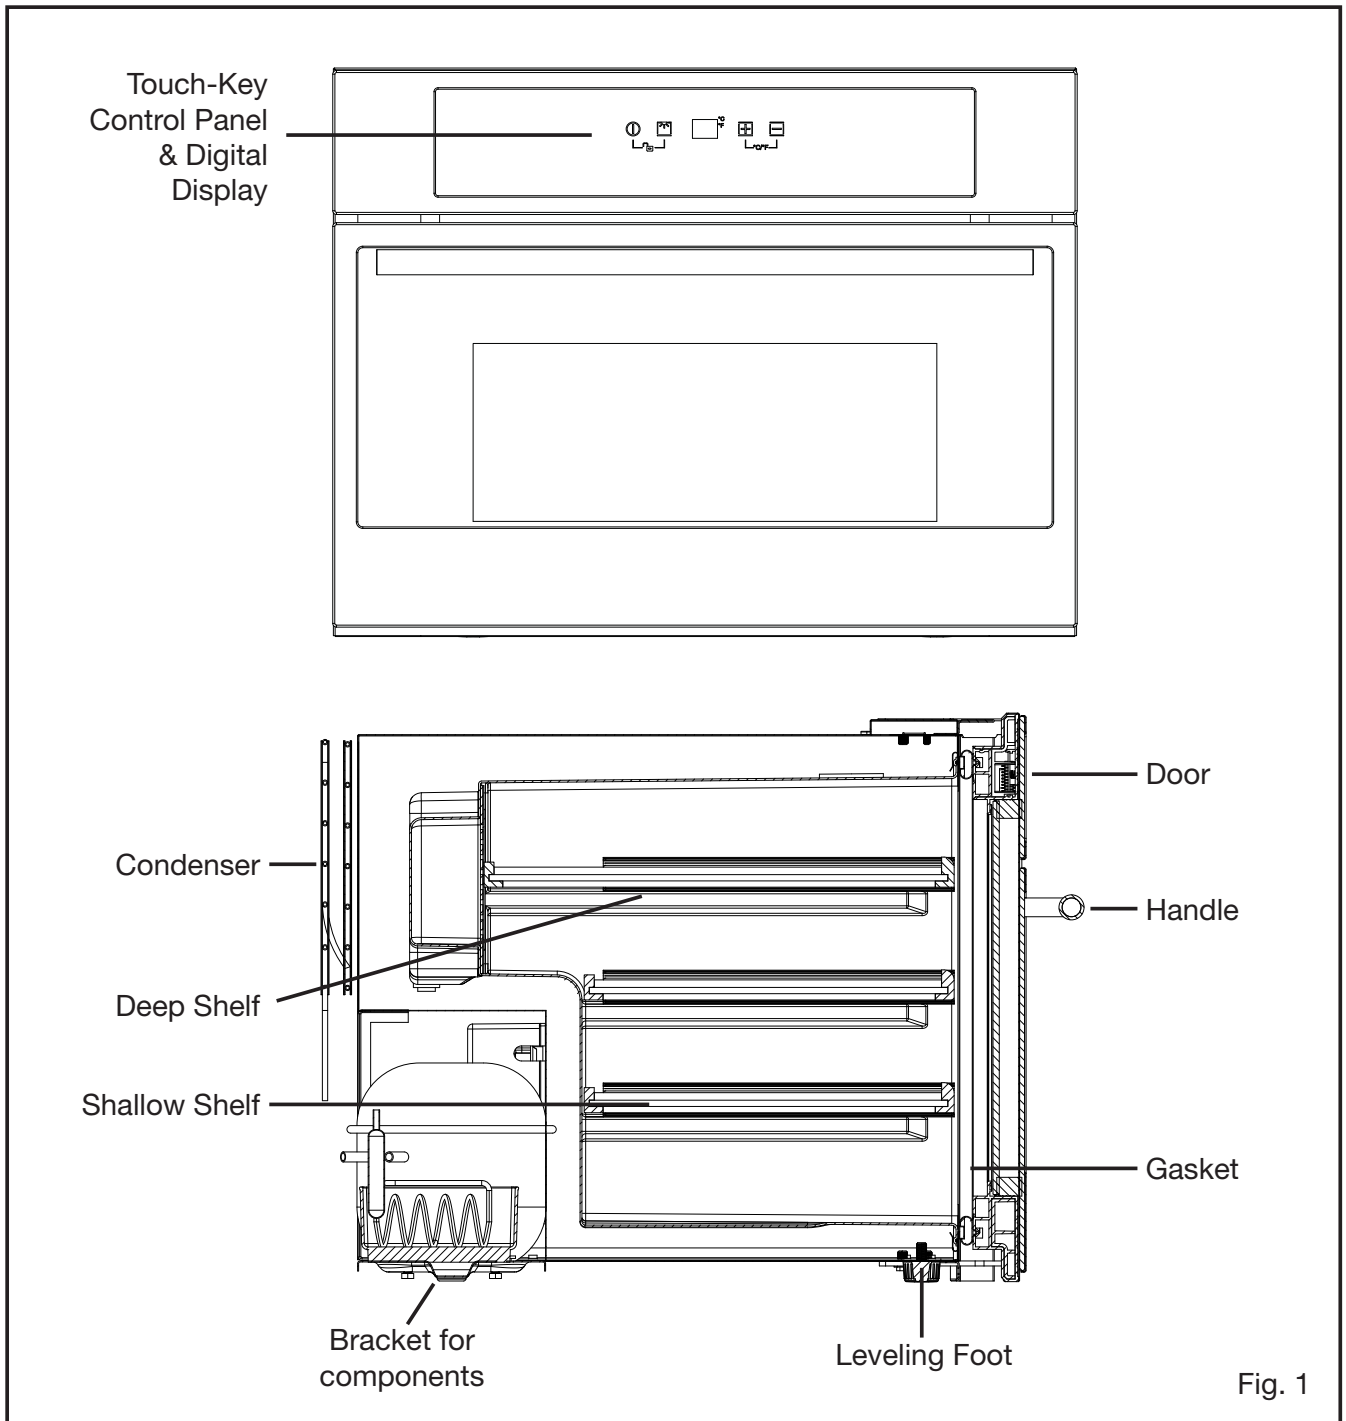


Fig. 1

455mm Height Installation Drawing

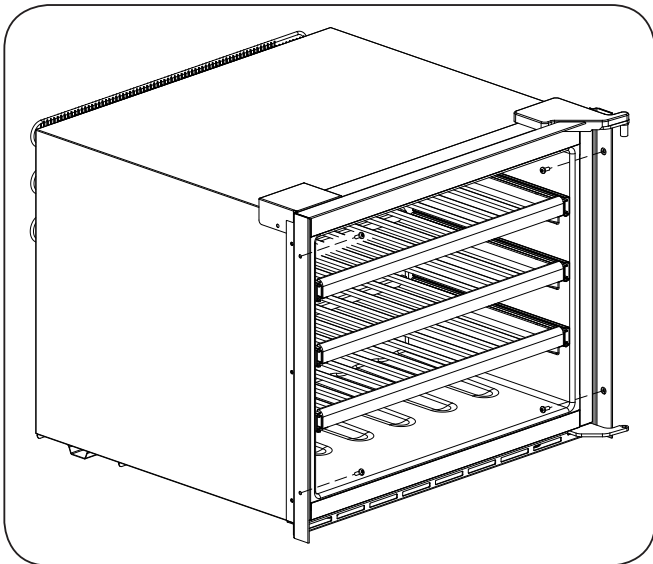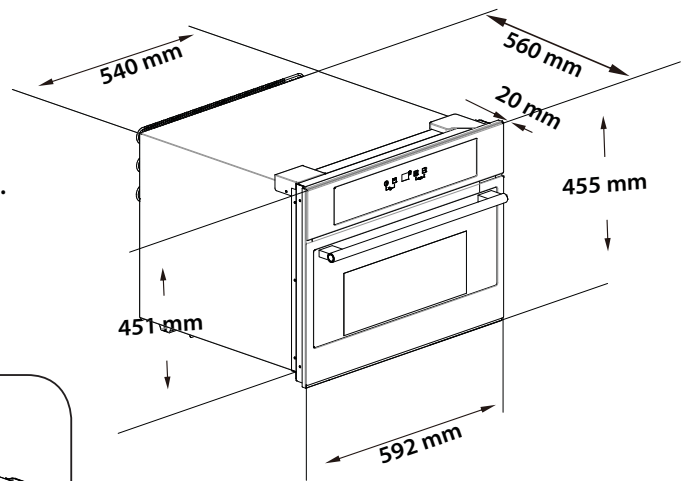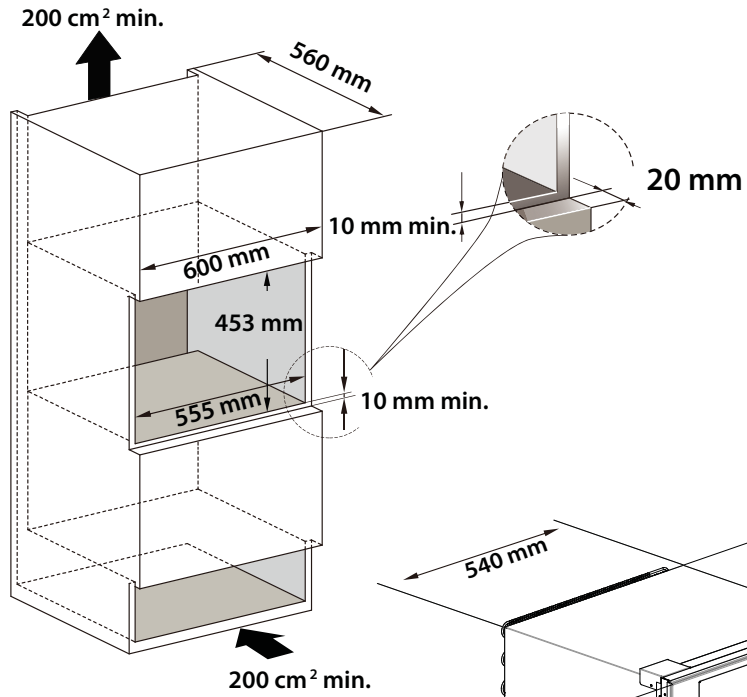

Tighten the 4 screws to fix the wine cooler

Fig. 2

ACCESSORY INSTALLATION BEFORE OPERATING

UNPACKING AND CLEANING THE WINE COOLER

- Remove the exterior and interior packing materials.
- Let the appliance stand upright for approximately 2 hours before connecting it to the power source, which helps to reduce the possibility of a cooling-system malfunction from handling during transportation.
- Use a soft cloth to clean the interior surface with lukewarm water.

OPERATING THE WINE COOLER

WORKING CLIMATE

- The appliance is designed for operating from SN to T climate (see below climate class chart). It is recommended to maintain the ambient around 22-25°C which helps the appliance working with low power consumption.

Climate Class	Ambient Temperature
SN	10 - 32 °C (50 °F – 90 °F)
N	16 - 32 °C (61 °F – 90 °F)
ST	18 - 38 °C (64 °F – 100 °F)
T	18 - 43 °C (64 °F – 109 °F)

- If the ambient temperature is above or below the designed climate range, the performance of the unit may be affected. For example, the appliance operating in extreme cold or hot conditions may cause interior temperatures to fluctuate, and the temperature set 5-22°C may not be reached sometimes.

WINE STORAGE

- The standard shelves are designed perfectly for Bordeaux bottle storage. The maximum loaded bottles may vary subject to the different size or dimension wine bottles you store.
- The shelves are with **Telescopic Rails** which has stoppers by themselves.

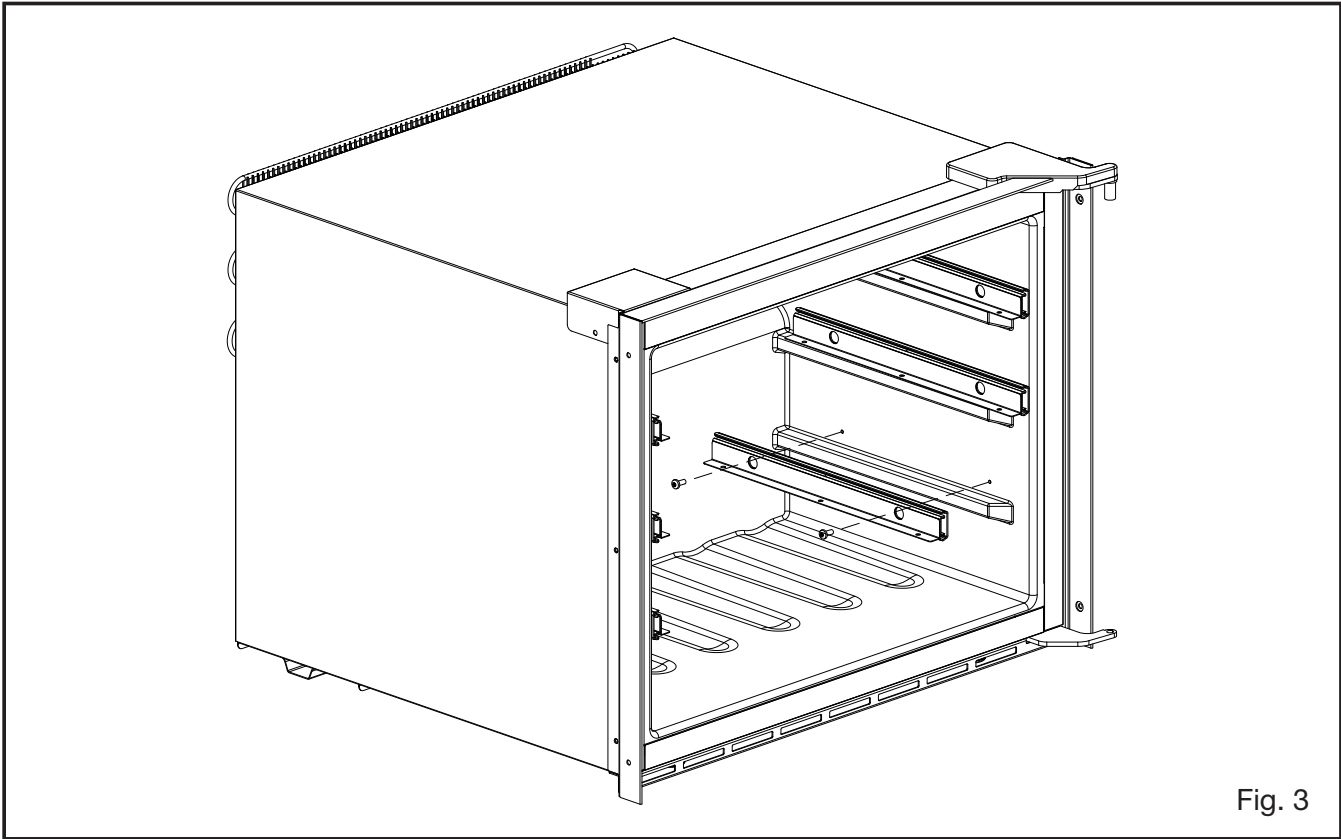


Fig. 3


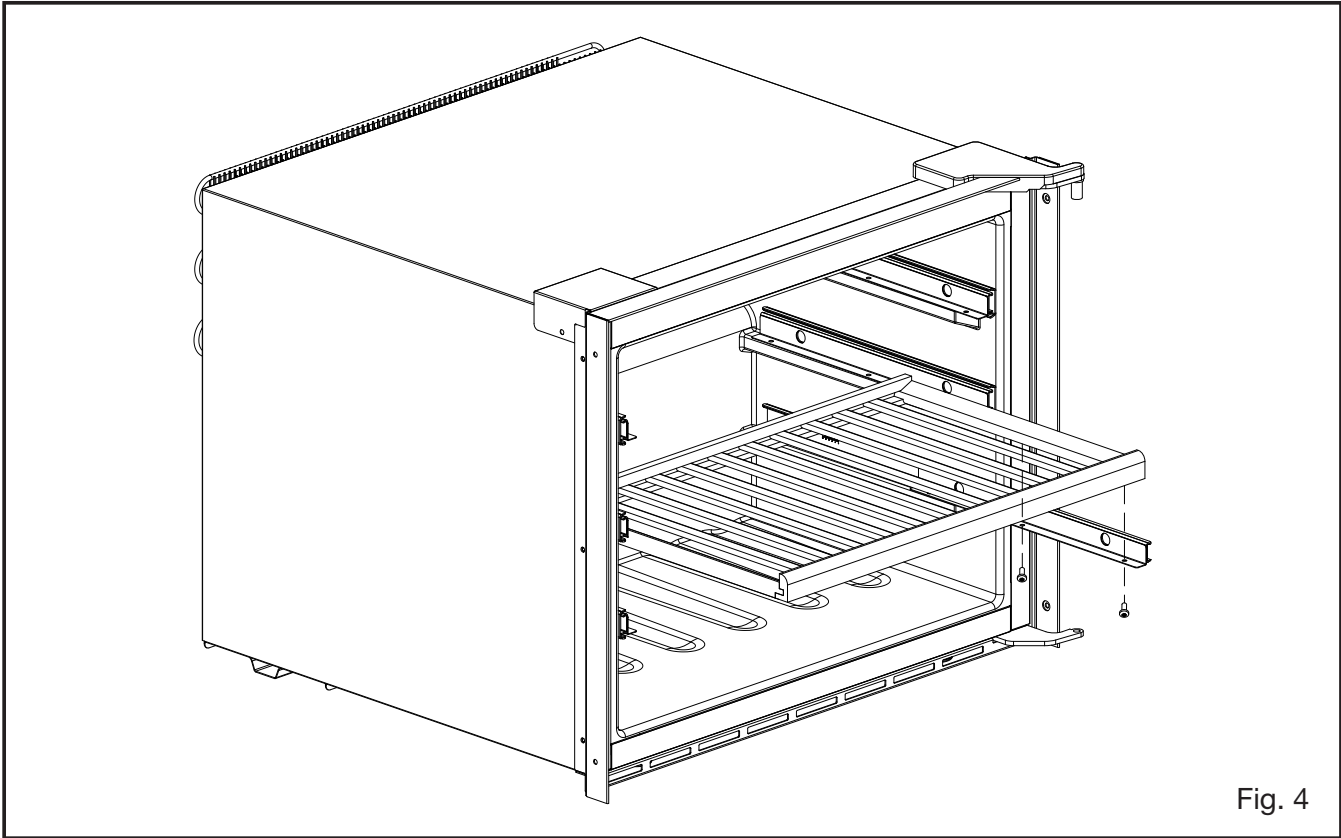


Fig. 4

- To prevent damaging the door gasket, make sure to have the door opened fully all the way before pulling the shelves out.
- Please store wine in sealed bottles.
- Do not cover the shelves with aluminum foil or any other shelf material which may prevent air circulation.
- Should the wine cooler be left empty for long periods it is suggested that the appliance is unplugged, and after careful cleaning, leave the door ajar to allow air to circulate inside the cabinet in order to avoid possible condensation, mold or odours forming.
- Recommended temperatures for chilling/storing your wines.

Red Wines	15 – 18 °C (59 °F – 64 °F)
Dry/White Wines	9 – 14 °C (48 °F – 57 °F)
Rose Wines	10 – 11 °C (50 °F – 52 °F)
Sparkling Wines	5 – 8 °C (41 °F – 46 °F)

CONTROL PANEL

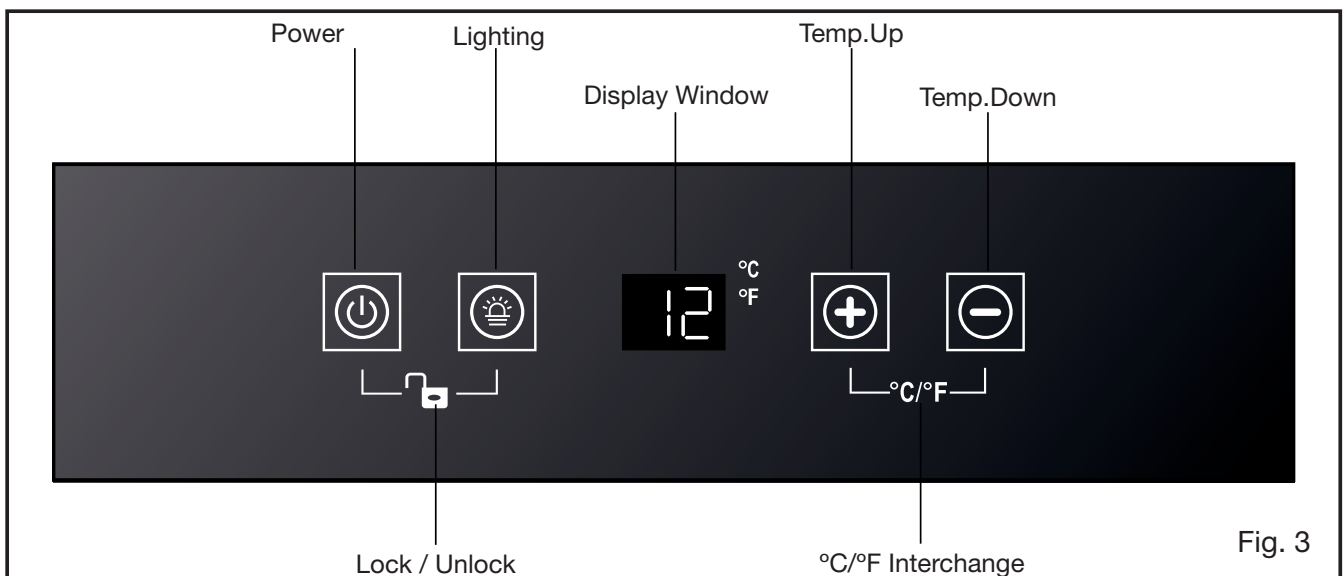



POWER ON/OFF CONTROL

- When the appliance is plugged in to a power outlet, it powers on automatically.
- Touch the power mark (⏻) and hold for **10 seconds** to turn off (or turn on) the appliance.
- No matter it is under a locked or unlocked situation, you can turn off the appliance by touching the power mark (⏻) and holding for **10 seconds**.







Warning: To avoid damaging the compressor, please do not turn on the appliance again within 5 minutes after you turn it off.

UNLOCKING THE CONTROL PANEL

- To unlock the control panel, touch the power mark and lighting mark   with 2 fingers at the same time and hold for 3 seconds . When unlocked a buzz sound will be heard.
- The control panel will be automatically locked with a buzz sound heard after 10 seconds without being touched.
- Under the locked situation, the control panel will not react to any touching (except the power mark which works as above Power On/Off Control description).

INTERIOR LIGHTING ON/OFF CONTROL

- Under the unlocked situation, touch the lighting mark  to turn on (or turn off) the interior cool LED lighting.
- The lighting will be continuously on if it is not turned off.
- The control panel will be automatically locked with a buzz sound heard after 10 seconds without being touched.
- Under the locked situation, the control panel will not react to any touching (except the power mark  which works as above Power On/Off Control description).
- Touch the power mark and lighting mark   with 2 fingers at the same time and hold for 3 seconds to unlock the control panel. When unlocked a buzz sound will be heard.






 
TEMPERATURE DISPLAY WINDOW

- The temperature is displayed in digital which is the best way to be read out. The digital is shown as the set temperature when you are setting the temperature, and it will change to be the real temperature of the inside cabinet after 10 seconds without being touched.
- When the temperature probe is out of order, the display window will show with “HH” or “LL” instead of a digital figure while continuous buzz sound will be heard. In case of this happens, this appliance is considerably designed to keep periodical running of compressor and fans which helps to keep the coldness of the inside cabinet to protect your stored wines.





Warning: To avoid destroying your stored wines, it is strongly recommended to have the appliance repaired immediately, as the spare periodical running can not ensure the appliance to achieve the temperature you have set.

TEMPERATURE SETTING

- The temperature setting range is 5-22 °C (41-72 °F).
- Directly touch the  or  mark to set the wine cooler temperature as you want.
- The first touch on  or  mark will recall the previous set temperature displayed in the digital window. If the appliance runs after a power failure (or unplugging), the previous set temperature does not exist and is replaced by the defaulted temperature at 12°C.
- Touch the mark  to increase the set temperature by 1°C. On the contrary, touch the mark  to decrease the set temperature by 1°C.
- The digital will change to display the real temperature of the inside cabinet after **10 seconds** without being touched.

Note: For the first time to use the appliance or to restart the appliance after having been shut off for a long time, you may find a few degrees variance between the set temperature and the displayed temperature. It is normal and everything of the appliance will be in the order after a few hours running

SELECTING FAHRENHEIT(°F) & CELSIUS (°C) DISPLAY

Touch the marks   with 2 fingers at the same time and hold for 5 seconds, you can interchange the Fahrenheit and Celsius display.

CARE AND MAINTENANCE

CLEANING THE WINE COOLER

- Turn off the power, unplug the appliance, and remove all items.
- Wipe the inside surfaces with a sponge and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart (approx. 1 litre) of warm water.
- Wash the shelves with a mild detergent solution. Allow wooden shelves to dry.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wipe the outside cabinet with warm water and mild liquid detergent. Wipe dry with a clean soft cloth.
- Do not use steel wool or steel brush on the stainless steel. These will contaminate the stainless steel with steel particles and rusting may occur.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times of door opening.

If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

MOVING THE WINE COOLER

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect outside of appliance with a blanket, or similar item.

ENERGY SAVING TIPS

- The appliance should be located away from heat producing appliances, and away from direct sunlight.
- Ensure that the unit is adequately ventilated. Never cover air vents.
- Only open the door when necessary. Avoid leaving the door open for long periods or opening/closing the door frequently..

TROUBLESHOOTING

If you feel the appliance is out of order, follow these instructions to try to see if you can solve the problem simply by yourself before calling for service.

N°	PROBLEM	PROBLEM POSSIBLE CAUSE / MEASURE
1	The wine cooler does not operate	Not plugged in. The appliance is turned off. The circuit breaker tripped or a blown fuse.
2	The wine cooler is not cold enough	Check the temperature control setting. External environment may require a higher setting. The door is opened too frequently. The door is not closed completely. The door gasket does not seal properly.
3	Automatically turn-on and turn-off frequently	The room temperature is hotter than normal. A large amount of contents has been added to the wine cooler. The door is opened too frequently. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
4	The lighting does not work	Not plugged in. The circuit breaker tripped or a blown fuse. The lighting is turned off.
5	Too much vibration	Check to assure that the appliance is level. Check to assure no parts inside the cabinet or in the compressor chamber are loose.
6	The wine cooler seems to make too much noise	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant. Contraction and expansion of the inside walls may cause popping and crackling noises. The appliance is not level.
7	The door will not close properly.	The wine cooler is not level. The door was reversed and not properly installed. The gasket is dirty. The shelves are out of position.
8	The display window is shown with "HH" or "LL" instead of a digital figure, and/or with continuous buzz sound.	The temperature probe is out of order.

Name: Fulgor Milano Australasia Pty Ltd ACN 164 163 982
Address: 14/24-32 Lexington Drive, Bella Vista
Telephone Number: 1300 FULGOR (1300 385 467)
Email Address: contact@fulgor.com.au
Website: www.fulgor.com.au

This Warranty is provided for the following Product: (please fill in details upon purchase)

Product Name: _____

Model Number: _____

Date of Purchase: _____

1. Warranty Period

1.1 Domestic Warranty

Fulgor Milano Australasia warrants that any Product purchased from it, and when used in accordance with the Instructions for household or personal use, shall be delivered free from defects in workmanship and materials and will perform for a period of two (2) years from the date of purchase.

1.2 Commercial Warranty

Fulgor Milano Australasia warrants that any Product purchased from it, and when used in accordance with the Instructions for Commercial Use, shall be delivered free from defects in workmanship and materials and will perform for a period of one (1) year from the date of purchase.

2. Exclusions from Warranty

2.1 This Warranty does not cover:

- i. Abuse;
- ii. Misuse;
- iii. Any damage sustained by a product whilst being transported;
- iv. Other defects not related to materials or workmanship;
- v. Consumable items including, but not limited to, replacement of light globes, glass breakage due to impact;
- vi. Damage or failure caused to the Product by unsuitable physical or operating environment.

3. Warranty Claim

3.1 To make a Claim you must:

- a) Contact your nearest Local Servicing Agent, details of which are on Fulgor Milano Australasia's website listed above; and
- b) Provide Proof of Purchase and this Warranty to the Local Servicing Agent.

3.2 Upon receipt of a valid Claim, a Local Servicing Agent will attend your premises to inspect the Product.

3.3 Where a Product is found to be defective, Fulgor Milano Australasia will, at its option and expense, repair or replace the Product or the defective material or part. If Fulgor Milano Australasia repairs or replaces a defective Product, the warranty period for any Product repaired or replaced does not extend beyond the original Warranty Period.

3.4 Where the Product is located outside the Normal Servicing Area, You must pay for the cost of the nearest Local Servicing Agent to attend your premises.

- 3.5** If You are unable to provide Proof of Purchase, Fulgor Milano Australasia will not be obliged to repair or replace the defective Product.
- 3.6** Fulgor Milano Australasia will not be responsible for any costs or expenses, loss or damage, associated with:
- a) Any transport of the Product to a Local Servicing Agent;
 - b) Any consequential damages from the use of the Product;
 - c) The de-installation and re-installation of the Product at Your premises to make the Product available for inspection and servicing/repair, or any consequential damage caused by de-installation and re-installation of the Product.
- 3.7** You may assign this Warranty. An assignee of this Warranty may only make a Claim where the following conditions are met:
- a) You have provided to the assignee, and the assignee produces, Your Proof of Purchase; and
 - b) Any claim by an assignee is made within the original Warranty Period.

4. Statutory and Other Legal Rights

- 4.1.** Your rights under this Warranty are in addition to and do not affect in any way any other rights or remedies that you have under any law which relates to the Product.
- 4.2.** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

5. Definitions

“Claim” means a claim made under this Warranty.

“Commercial Use” means use that is not household or personal use;

“Fulgor Milano Australasia” means Fulgor Milano Australasia Pty Ltd ACN 164 163 982;

“Instructions” means any instructions provided by Fulgor Milano Australasia for the use of the Product;

“Local Servicing Agent” means a servicing agent which has been appointed by Fulgor Milano Australasia, to service a Product;

“Normal Servicing Area” means an area where a Local Servicing Agent has been appointed by Fulgor Milano Australasia to service Products;

“Product” means the product of Fulgor Milano Australasia that this Warranty applies to;

“Proof of Purchase” means the receipt issued to You at the point of sale;

“Warranty” means this warranty statement;

“Warranty Period” means the applicable warranty period depending on whether it is commercial warranty or domestic warranty;

“You” means you the purchaser of the Fulgor Milano Australasia Product.